

DAEWOO KALOS 5 P modello 2002
CHEVROLET AVEO 5 P modello 2008

MOCSKT 0007

MOCSRR0AC0010 cm 110

MOCSRR0AL0006 cm 110



componenti: 4 - L1043 4 - RC1500/95 8 - RCVM6X9Q 4 - RC20200026 1 - RCBR5	I-montare le guarnizioni GB-fit the gaskets E- montar las juntas	I-montare gli attacchi GB-fit the clamps E- ajustar las pletinas
---	---	---

montare la barra anteriore



MOCSRR0AC0010 cm 110



MOCSRR0AL0006 cm 110





5

anteriore, avant, front,
vorne, delantera




5




4 Nm


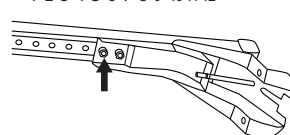
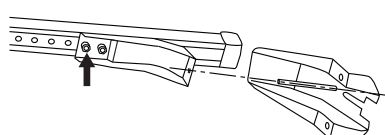


I-montare la barra anteriore
GB- fit the front bar
E- ajustar la barra frontal

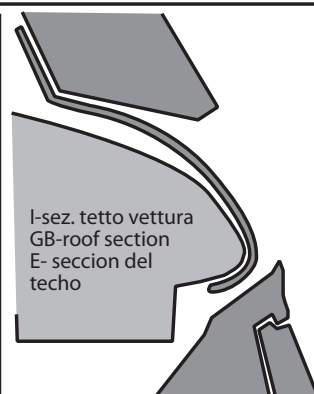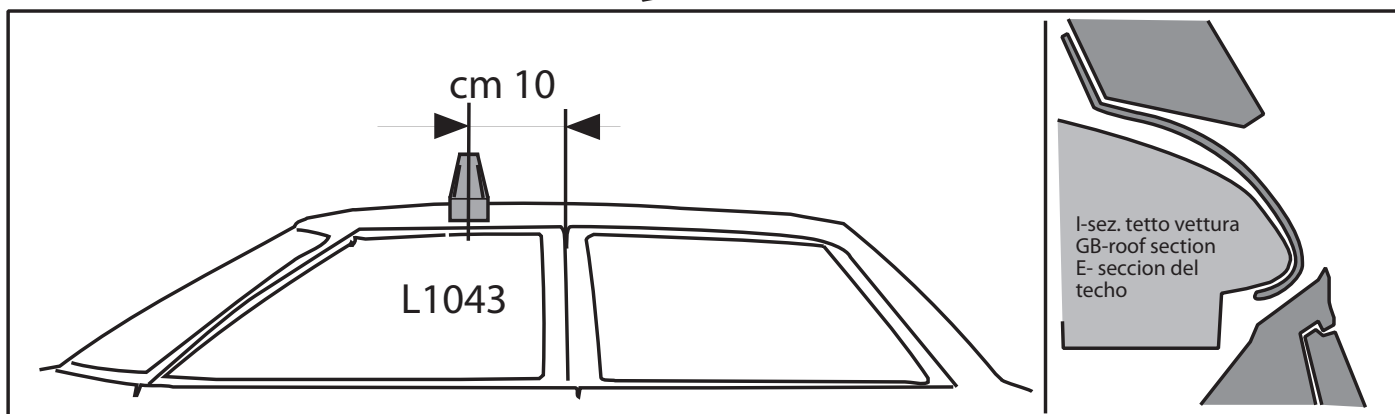
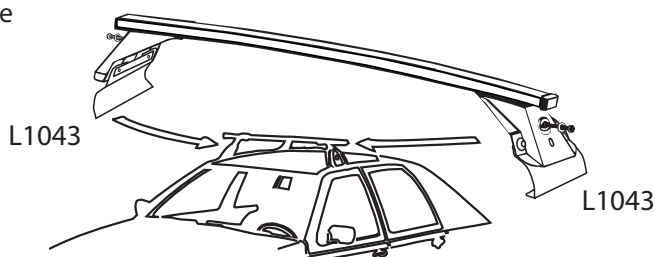


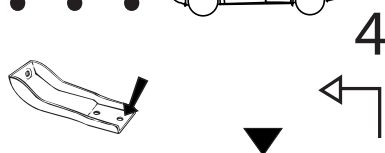

4 posteriore, arriere,
rear, hinten, trasera

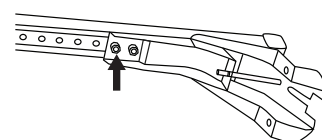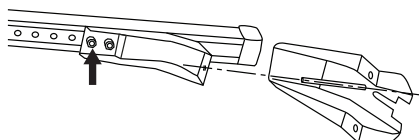

I- montare la barra posteriore
GB-fit the rear bar
E- ajustar la barra trasera

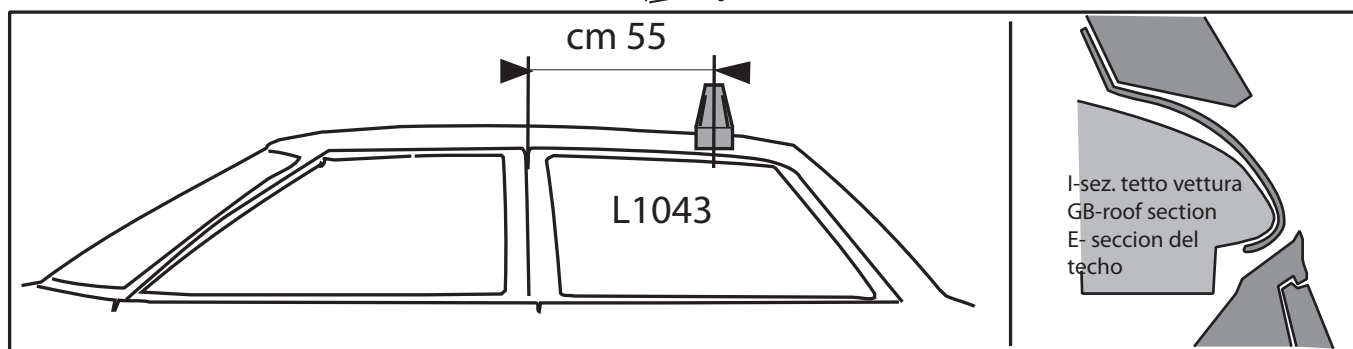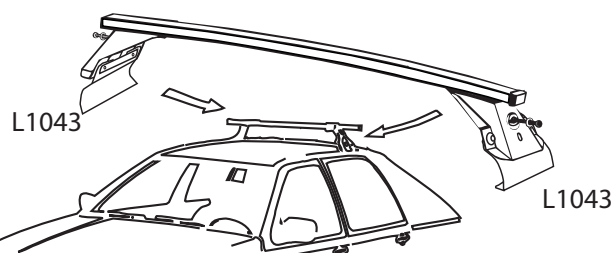

I- Per stringere, usare la chiave
come indicato nel disegno. (Non si
assumono responsabilità per danni
causati dall' impiego di chiavi diverse
da quella in dotazione al prodotto).

F- Pour serrer , utiliser la cle
comme indique ci dessous.
GB-For tightening, please use the
wrench as per the drawing.

D- Zum Anziehen benutzen Sie bitte
den Inbusschlüssel, nur wie auf dem
Bild dargestellt.

E- Para el correcto ajuste, utilizar la llave fija
tal y como se indica en la imagen.

